


MODEL ISB16

SPOTNAILS®
DIVISION OF PEACE INDUSTRIES, LTD.
1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

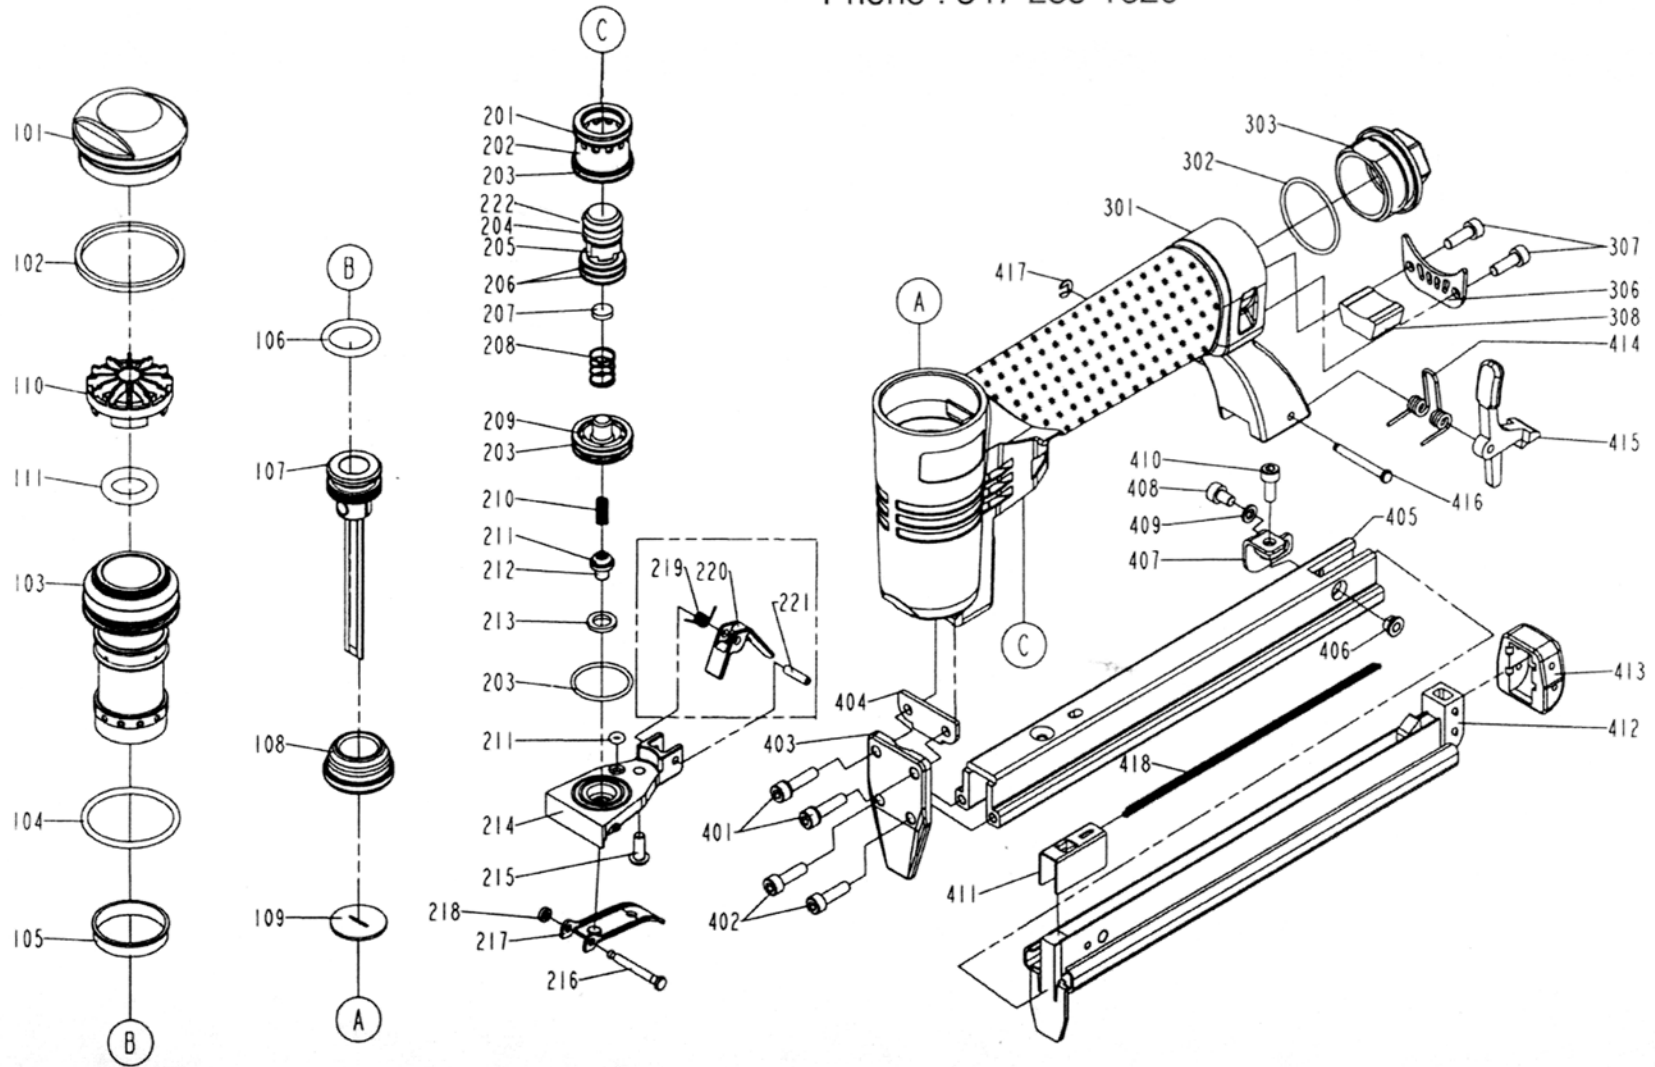

7/20/2009

SPOTNAILS MODEL ISB16

Ref No.	Part No.	Description	Ref No.	Part No.	Description
101	P-60203	Cap	222	P-64526	O-Ring
102	P-64523	O-Ring	301	P-12528	Body
103	P-05121	Cylinder	302	P-64522	O-Ring
◆ 104	P-64515	O-Ring	303	P-60204	End Cap (NPT 1/4"x18)
105	P-32264	Cylinder O-Ring	306	P-12529	Exhaust Cover
◆ 106	P-64516	O-Ring	307	P-24553	Socket Head Cap Screw
107	AS-06094	Piston & Driver Assembly	308	P-70052	Exhaust Mesh
108	P-15243	Bumper	401	P-24548	Socket Head Cap Screw
109	P-15248	Driver Guide	402	P-24549	Socket Head Cap Screw
◆ 110	P-15246	Seal	403	P-10329	Spacer
◆ 111	P-64524	O-Ring	404	P-10330	Static Front Plate
◆ 201	P-64517	O-Ring	405	P-12533	Magazine Cover
202	P-22206	Trigger Valve Housing	406	P-26182	Anchor Block
◆ 203	P-64518	O-Ring	407	P-32262	E-Ring
◆ 204	P-64519	O-Ring	408	P-09229	Pusher
205	P-22207	Valve Plunger	409	P-13111	Bracket
◆ 206	P-64520	O-Ring	410	P-32261	Flat Washer
◆ 207	P-15247	Seal	411	P-12534	Cover
208	P-18511	Spring	412	P-24550	Socket Head Cap Screw
209	P-22208	Plunger Cap	413	P-18515	Spring
210	P-18512	Spring	414	P-18514	Spring
◆ 211	P-64521	O-Ring	415	P-04088	Latch
212	P-22209	Plunger	416	P-12535	Magazine
◆ 213	P-15245	Seal	417	P-07417	Spring Pin
214	P-12527	Valve Cover	418	P-24551	Socket Head Cap Screw
215	P-24547	Button Head Cap Screw	419	P-96174	Link
216	P-07414	Step Pin	420	P-06271	Driver Guide
217	P-21093	Trigger	421	P-03094	Roller
218	P-64525	Rubber Washer	422	P-24552	Flat Head Screw
219	P-18513	Spring	423	P-07416	Latch Pin
220	P-53186	Safety Stopper	424	P-07418	Spring Pin
221	P-07415	Spring Pin	425	P-64527	O-Ring

◆ Parts Included In AS-97328 O-Ring And Seal Kit